


## FMR/I10 Spare Parts List

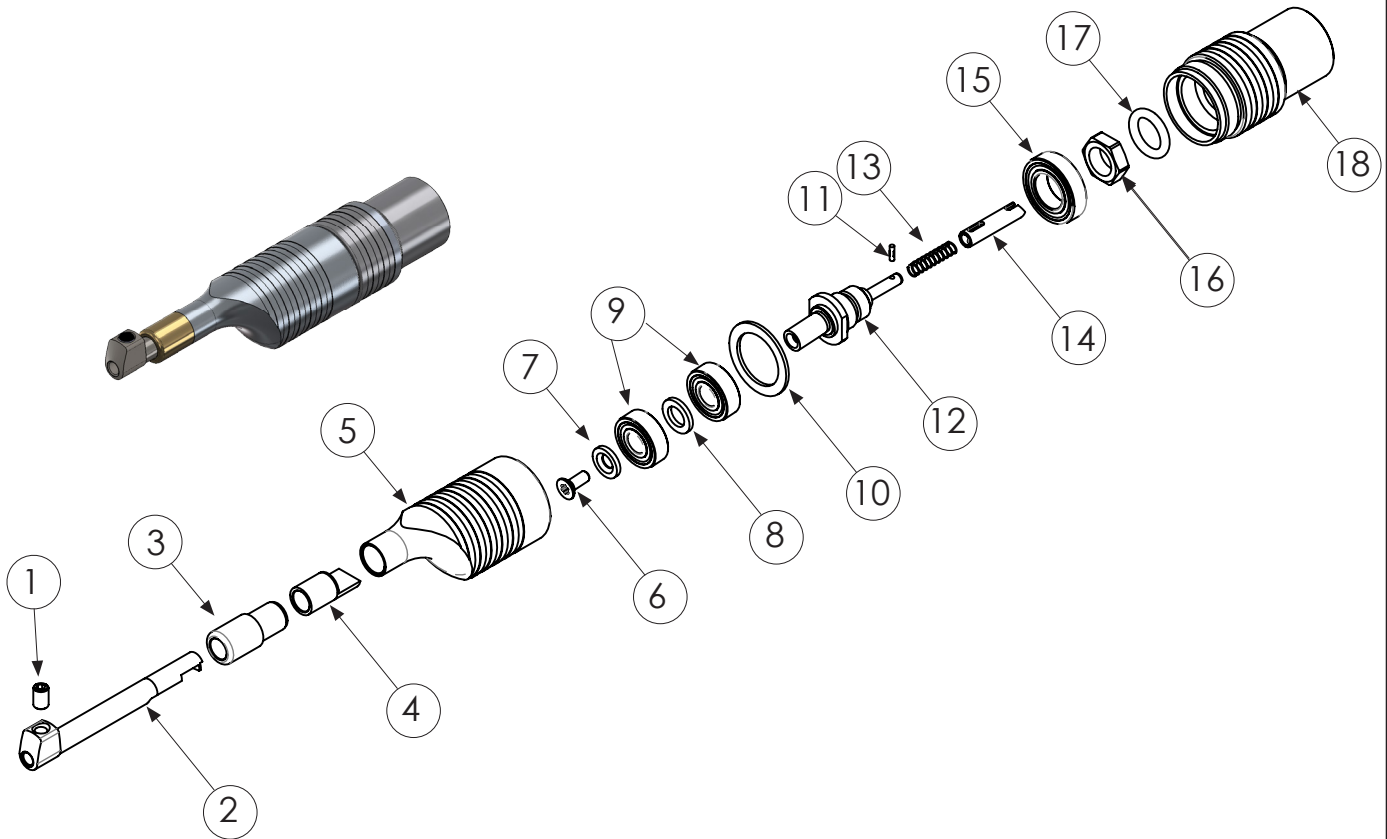

Pos.	Pcs.	Item No.	Description	Sub-Assembly
1	1	42038	Locking Screw	
2	1	FMR-3	Tool-Holder	
3	1	FMR-73	Guide Steering (Front-piece)	
4	1	FMR-74	Guide Steering (Back-piece)	FMR-2/P
5	1	FMR-1	Housing	
6	1	42039	Screw	
7	1	FMR-7	Bearing Washer	
8	1	FMR-8	Spacer	
9	2	44024	Ball Bearing	
10	1	FMR-9	Washer	
11	1	43014	Pin	
12	1	FMR-24	Main Spindle	
13	1	PDS-9	Spring	
14	1	PDS-5	Clutch	
15	1	44022	Ball Bearing	
16	1	FMR-54	Nut for Main Spindle	
17	1	60506	O-ring	
18	1	FMR-26	Connecting Sleeve	