

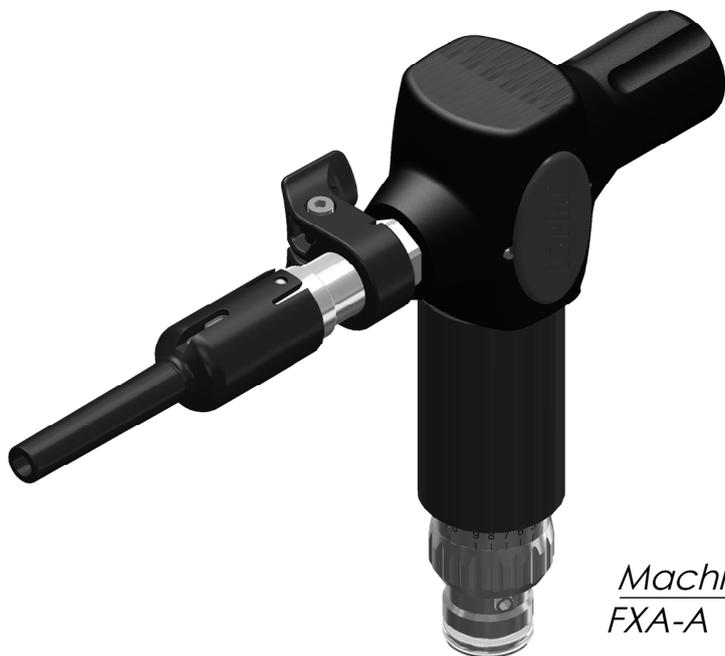


FXL-N - Spare Parts list

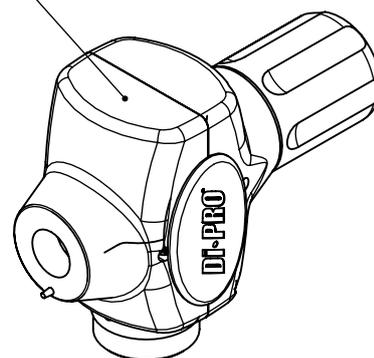


*Machine housing
FXA-A*


*Tool holder
FXA-T*

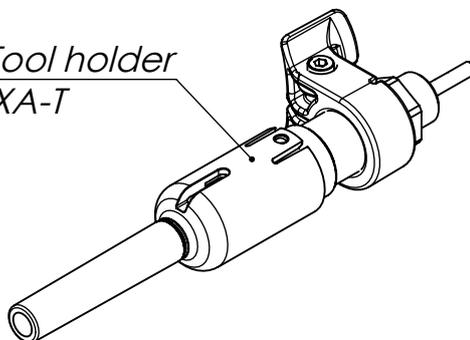


*Air motor
FML-B*

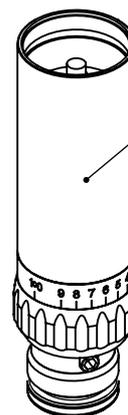

Handel sleeve cover (FXA-15)

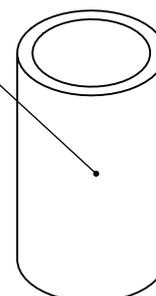


FXA-A - Spare Parts list

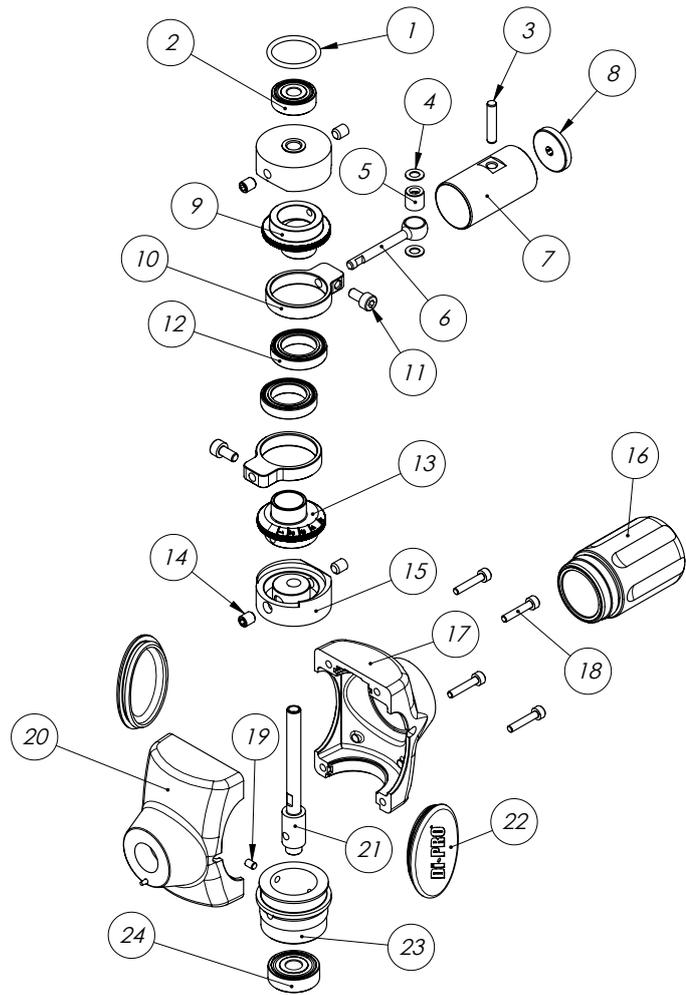

Pos.	Item No.	Description.	Units / machine	Sub-Assembly
1.	60514	O-ring	1	} FXA-U (one piece of FXA-19 included)
2.	44038	Ball bearing	1	
3.	43037	Parallel pin	1	
4.	44043	Washer	2	
5.	44040	Needle bearing	1	
6.	FXA-18	Connecting rod	1	
7.	FXA-108	Counterweight	1	
8.	FXA-19	Counterweight insert	3	
9.	FXA-8/C	Eccentric inner part (for counterweight)	1	
10.	FXA-20	Connecting rod	2	
11.	42057	Screw	2	
12.	44048	Ball bearing	2	
13.	FXA-8/T	Eccentric inner part (for tool-holder)	1	
14.	42055	Screw	4	
15.	FXA-9	Eccentric (outer part)	2	
16.	FXA-16	Counterweight casing	1	
17.	FXA-1	Back Crankcase part	1	
18.	42054	Screw	4	
19.	43027	Parallel pin	1	
20.	FXA-K	Front Crankcase part (incl FNA-25)	1	
21.	FXA-7	Shaft	1	
22.	FXA-3	Rubber cover (for machine housing)	2	
23.	FXA-10	Motor connection	1	
24.	44039	Ball bearing	1	


NOTE! It is recommended to replace both the back and the front crankcase parts (FXA-1 and FXA-K at the same time.

FXA-T - Spare Parts list

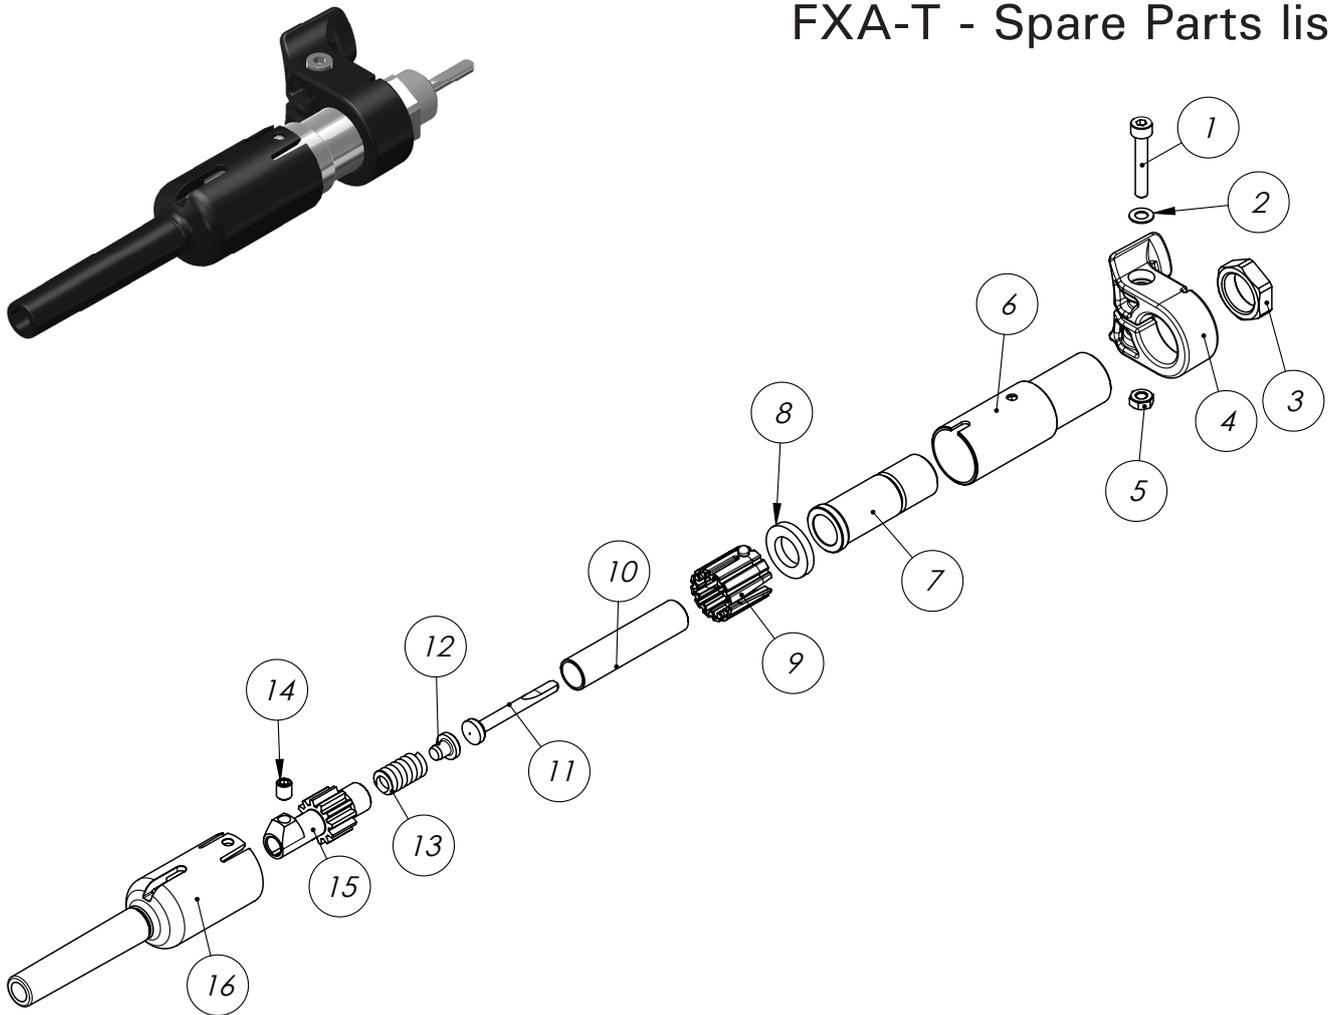

Pos.	Item No.	Description.	Units / machine	Sub-Assembly
1.	42001	Screw	1	
2.	41000	Washer	1	
3.	FNH-21	Retaining nut	1	
4.	FXA-107	Guide block	1	
5.	40000	Nut	1	
6.	FXA-100	Guide sleeve	1	
7.	FXA-102	Supporting sleeve	1	
8.	FXA-106	Lubricating felt	1	
9.	FXA-103	Guide bushing	1	
10.	FXA-105	Piston	1	
11.	FNH-14	Connecting rod	1	FXA-V
12.	FNH-16	Spring insert	1	
13.	FNH-17	Spring	1	
14.	42055	Tool locking screw	1	
15.	FXA-101	Tool holder part	1	
16.	FXA-104	Extension pipe	1	

FML-B - Spare Parts list

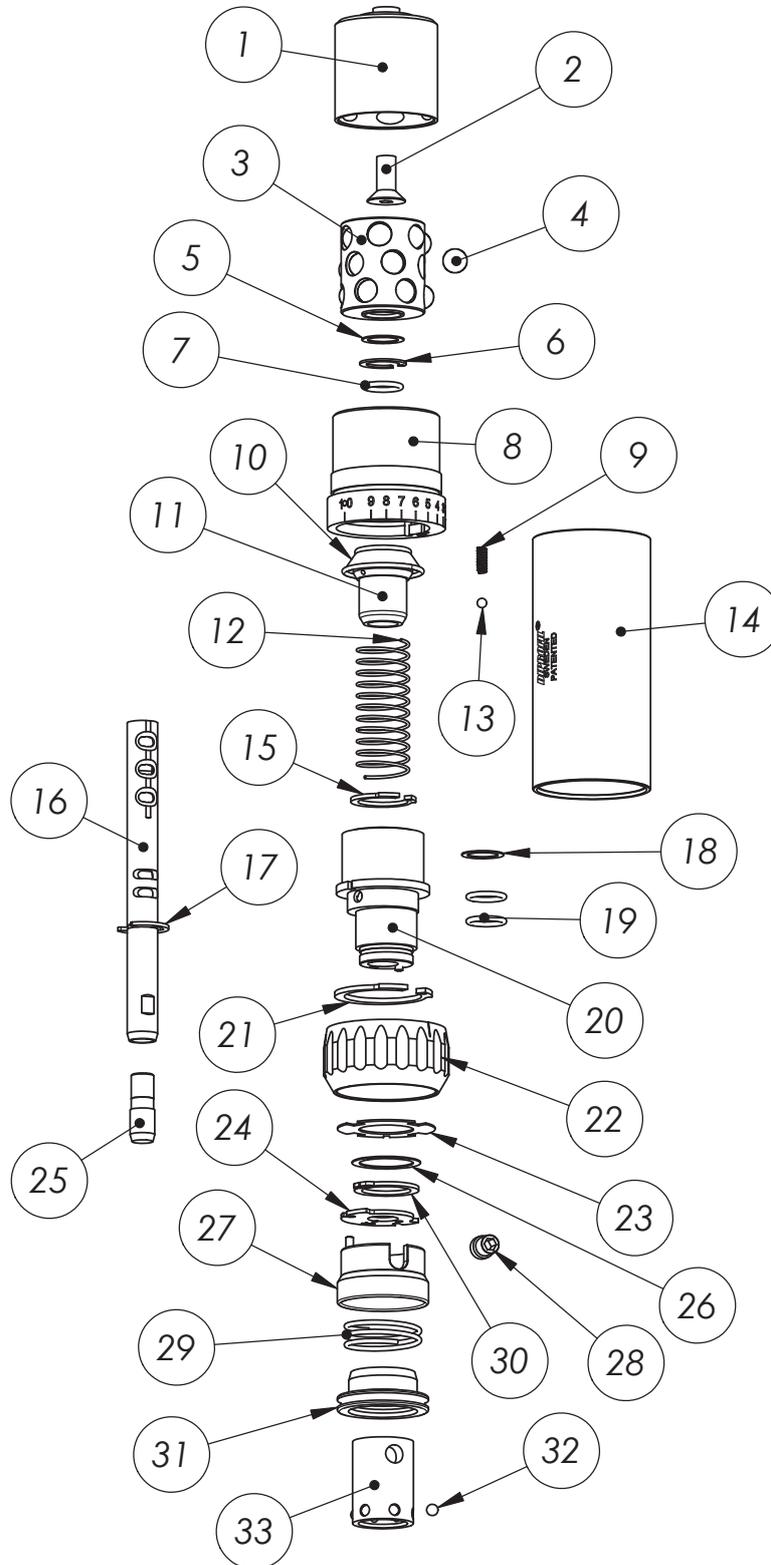

FML-B - Spare Parts list

Pos.	Item No.	Description.	Units / machine
1.	HSL-6	Rotor ring	1
2.	42010	Screw for rotor ring	1
3.	HSL-5	Rotor	1
4.	FND-X18	Steel piston balls	1 set of 18 pcs
5.	HSL-14	Washer	2
6.	HSL-20	Circlip	1
7.	SOR-121P5	O-ring	1
8.	FND-F	Front regulator body with pin	1
9.	HSL-18	Spring	1
10.	HSL-8	Membrane	1
11.	HSL-7	Adjusting sleeve	1
12.	HSL-9	Spring	1
13.	STK-2.5	Steel ball	1
14.	HSL-17	Outer sleeve	1
15.	46003	Circlip	1
16.	HSL-A	Slide shaft with pin	1
17.	46008	Circlip	1
18.	HSL-14	Washer	1
19.	SOR-121P5	O-ring	2
20.	FND-B	Rear regulator body with pin (includes 2 pcs of O-ring SOR-121P5)	1
21.	46005	Circlip	1
22.	HSL-D	Regulating wheel	1
23.	HSL-15	Spring washer	1
24.	HSL-43	Locking washer	1
25.	HSL-23	Filter	1
26.	HSL-24	Washer	1
27.	FND-G	Reversing wheel with pin	1
28.	HSL-45	Lock screw	1
29.	HSL-42	Spring	1
30.	46002	Circlip	1
31.	HSL-44	Lock ring	1
32.	44005	Steel ball	6
33.	HSL-40	Front quick connection	1